
68000 Hardware Manual

Peter A. Stark

Copyright © 1987 - 1991
by Peter A. Stark
and licensed to
Star-K Software Systems Corp.
P. O. Box 209
Mt. Kisco, NY 10549
(914) 241-0287

All rights reserved

Copyright © 1987 - 1991 by Peter A. Stark

All Star-K computer materials are licensed on an "as is" basis without warranty. Star-K Software Systems Corp. shall have no liability or responsibility to customer or any other person or entity with respect to any liability, loss or damage caused or alleged to be caused directly or indirectly by computer equipment or materials sold by Star-K, including but not limited to any interruption of service, loss of business or anticipatory profits or consequential damages resulting from the use or operation of such computer or computer programs.

Wherever used in this manual, HUMBUG® and SK*DOS® are registered trademarks of Star-K Software Systems Corp. This is revision 1.01 of the manual, last revised on March 8, 1991

CONTENTS

0.	Introduction	1
1.	Overview of a Micro Computer	3
2.	The Power Supply	13
3.	LED Indicators	21
4.	The RESET Circuit	27
5.	Master Clock Circuit	31
6.	68000 Operation	35
7.	68000 Operation in an Open Loop	47
8.	The MAP Circuit	53
9.	The Bus Error Circuit	59
10.	The Address Decoder	63
11.	The DTACK Circuit	71
12.	ROM and Static RAM	75
13.	The Magic Moment: First Signs of Life	79
14.	Serial Interface	87
15.	PC-Compatible Keyboard	93
16.	PC-Compatible Bus Connectors	97
17.	Computer Memories	105
18.	DRAM Circuitry	113
19.	Floppy Disk Controller	127
20.	Parallel Printer Port	135
21.	Optional -HDO Hard Disk Port	139
22.	Loose Ends	143
	APPENDICES	
A.	SK68K Parts List	145
B.	Computer Number Systems	149
C.	How to Solder	171
D.	Disk Organization	175